



BBrain Reminder Day Clock



Hello!

Thank you for choosing the **BBrain Reminder Day Clock**. We're excited to help you get the most out of your new clock. This guide will show you how to use and personalize it to suit your needs.

Table of Contents

Quick start

Operating your Clock

Main Configuration Screen

Changing Settings

Language

Display mode

Display colour

Date set

Time set

Time mode

Night mode

Summer/Wintertime

Time of day settings

Brightness

Talking Clock

Volume settings

Factory reset

Set new reminder

Reminder overview

Troubleshooting


Other information

Important safety warnings

Need More Help?


Quick start

The **BBrain Reminder Day Clock** is up and running by (1) plugging the power cable into the circular socket underneath the clock and (2) connecting the power adapter to a regular wall socket.

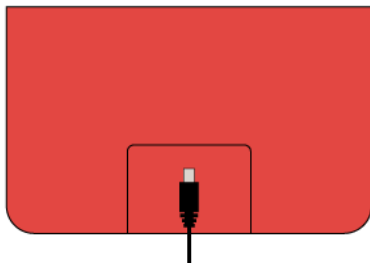


After a few seconds, the clock displays the BBrain welcome screen followed by the main time and date screen.

- i** To adjust the time or date, and choose between the different display modes, please refer to the [Changing Settings](#) Section.


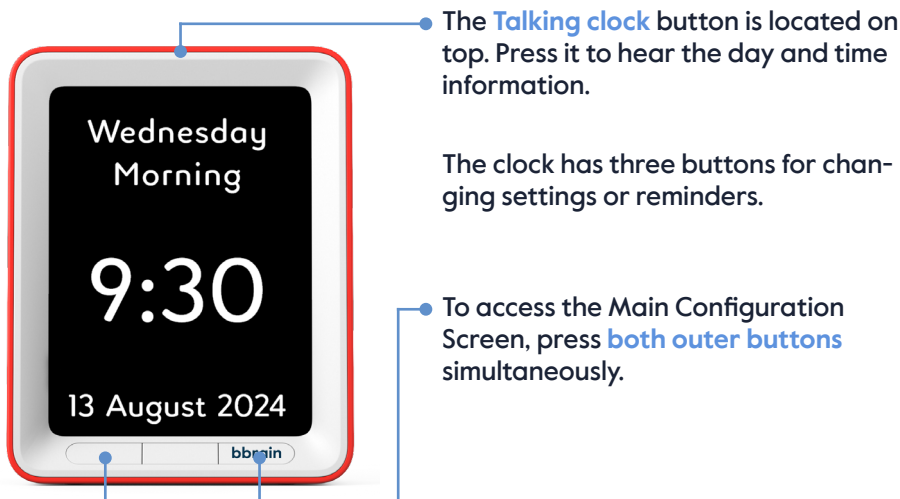


Operating your Clock

Button functions differ across menu screens and are always explained by the word or symbol above each button. In some cases, the buttons will show **Up** and **Down** arrows to navigate menus and an **OK** or **Edit** button to select or modify features:



When editing dates, the buttons with the **up** and **down arrows** must be used to adjust the selected value. The selected value is always indicated by a white square cursor. The right arrow button, located on the right, allows moving to the next field. Once the final value is reached, an **OK** option will appear in the middle button allowing to save the selection.



Main Configuration Screen

Inside the Main Configuration Screen, the following options are available:

- Enter the **Setup Menu**.
- **Set a new reminder**.
- Use the **Reminder Overview** section to view or edit your set reminders.

Select the **Back** option to exit and return to the main clock screen.

Changing Settings

The **BBrain Reminder Day Clock** offers a variety of customizable settings to fit the desired preferences.

Steps to change the settings:

1. Press the left and right outer buttons at the same time to access the **Main Configuration Screen**.
2. Navigate to the **Setup Menu**.
3. To modify the required setting, select it and adjust its values as needed.


- i** If you get stuck at any point in the setup menu, simply turn the clock off and on again at the wall socket. It will return to the clock display.

Language

The clock offers a variety of languages to be chosen, modifying the texts on the screen, menus, and voice reminders.

Display mode


Choose the desired display. The clock offers a wide range of digital and analog display options, showing more or less detailed information and icons, allowing the user to keep an organized schedule, and providing an easy-to-follow time awareness.

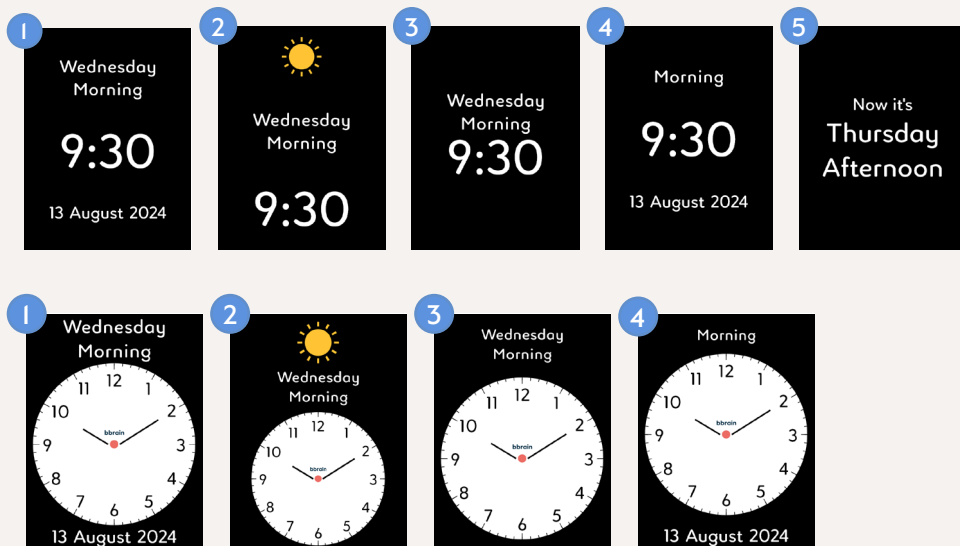




Display colour


Choose the colour of the clock display to make it as easy to see as possible.

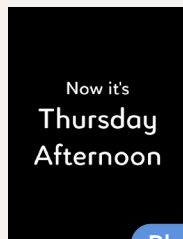

Black

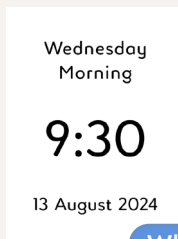

White

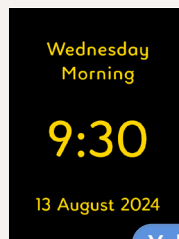

Yellow

Date Set

Allow the user to set the date displayed by the clock.

Time set

Set the time of the clock.

Time mode

Allows to choose the displayed time format between 12 or 24-hour mode.

Night mode

Night mode starts when the “night” part of the day starts. When the night mode is activated, it will turn the screen background black, the texts and icons to yellow, and automatically set the brightness to low.

The displayed screen mode selected during the day will remain active by night.

Summer/Wintertime

Activating this feature allows automatic switching between summer and winter time: Clocks move forward one hour at 2:00 AM on the last Sunday of March and move back one hour at 3:00 AM on the last Sunday of October.

Time of day settings

This menu allows the user to activate/deactivate and set the starting time of each day part.

The available day parts are Morning, Late morning, Noon, Afternoon, Evening, and Night.

Depending on the chosen language, the default values will differ.



In German, Vormittag and Nachmittag day parts will be enabled by default.

For all the other languages, the **Late morning** will be the only daypart disabled by default:

Example default values for German users:

Day part	Default value
Morgen	06
Vormittag	09
Mittag	12
Nachmittag	13
Abend	18
Nacht	00

Example default values for English / French users:

Day part	Default value
Morning	06
Late morning	Disable
Noon	12
Afternoon	16
Evening	18
Night	00

- i** If the user requires it, the **Disabled** day parts can be easily activated by choosing one of the available start times for them.

Brightness

The user can select the brightness of the clock screen between three levels: low, medium, or high.

- i** If the brightness is set to medium or high, it will dim to a low level while the clock displays the 'night' day part.



Talking Clock

This option allows the user to set when the day and time are pronounced:

- Off.
- On button press.
- Hourly.
- Hourly and button.

i If the talking clock is set to sound **hourly**, it won't sound whilst the clock displays **night**.

Please remember to avoid setting the **Talking clock** feature and the reminders exactly at the same time.

Volume settings

The clock offers three volume levels for reminder alarms and talking clock playback: low, medium, high, or max.

Factory reset

Resetting to factory settings will delete all set reminders. All customized settings will revert to their defaults. However, the time and date you set will be retained.

Set new reminder

The clock can store a maximum of 32 reminder alarms, which can be set to trigger once, daily, or weekly. Two main categories of reminders can be used: pre-loaded reminders or personalized voice reminders.

The pre-loaded reminders include a friendly voice message, a screen notice, and a picture. The pre-loaded reminders relate to, among other things, medication, eating and drinking schedule, day and night rhythm, safety, care moments, and personal care. The full list can be seen inside the **Reminder Type** option.

Steps to set a pre-loaded reminder

1. Press the left and right **outer buttons** at the same time to access the **Main Configuration Screen**.
2. Navigate the menu and select **Set new reminder** option.
3. Choose the **Reminder Type** option.
4. Select a preset reminder from the list. If you prefer a voice reminder,

please refer to the [Recording Personal Reminders](#) section below.

5. Select the [Frequency](#) option to set the reminder's repetition, choosing one of the following options:
 - Once: From the [Date](#) sub-menu, select the desired date to apply the reminder.
 - Daily: using the next sub-menu [Days](#) select the desired option:
 - o Every Day (Monday to Sunday)
 - o Weekdays (Monday to Friday)
 - o Weekends (Saturday and Sunday)
 - [Weekly](#): using the sub-menu [Day](#) select the day of the week where the reminder will be active.
6. Select the [Time](#) option to define the time of the day when the reminder will sound and be displayed on the screen.

i Note: If the **BBrain Reminder Day Clock** is set to sound hourly, do not set reminders to sound at the same time to avoid overlapping functions.


7. Navigate to [Displayed for](#) to choose the duration of the visual reminder to remain active on the screen. For voice reminders, the screen will simply display the word [Reminder](#).
8. Go to [Message Repeats](#) to select how many times you want the audio message to repeat when the reminder is active. Each audio message repetition will happen one immediately after the other.

Once all parameters are set, select [Back](#) to return to the [Main Configuration Screen](#), and select [Back](#) again to return to the clock screen.

Steps to record a personalized voice reminder


To create personalized voice reminders, voice messages can be recorded. To do this, follow steps 1-3 from the [Set a new reminder](#) section, then:

- I. Select [Voice](#) from the reminder list. The screen below will display.

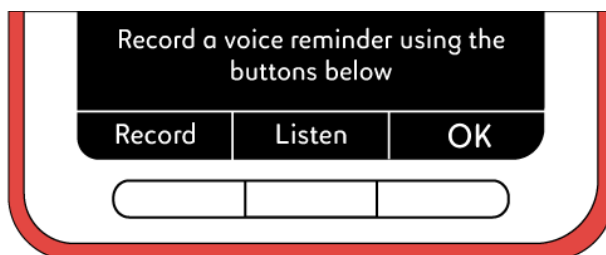

2. Press **Record** to begin recording your message and **Stop** to finish recording it. The **Listen** button allows checking the recording. To record the message again, simply press **Record** one more time. It's best to record a message that is as short and clear as possible, there is 12 seconds of recording time.
3. After finishing recording, select the **Save** button to finish the process.
4. From now on, the voice reminder will appear in the **Reminder Overview** section as 'Voice1'.
5. If additional voice reminders are recorded, they will appear as 'Voice2', 'Voice3' and so on.
6. If a voice reminder is deleted, that number of voice reminder will be free to be re-used.


i Tip: For the clearest recording, speak close to the microphone on top of the clock, to the right of the button. You can find instructions for adjusting the volume in the **Changing Settings** section.

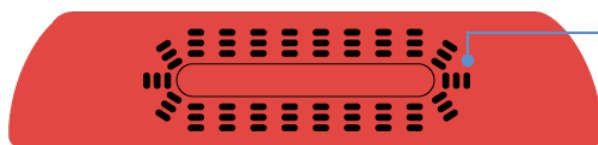

The microphone is located here.

Reminder overview

The Reminders Overview section is found at the bottom of the Main Configuration Screen. Here, you can view, modify and delete any reminders that have been set. If there are none, this section will appear empty.

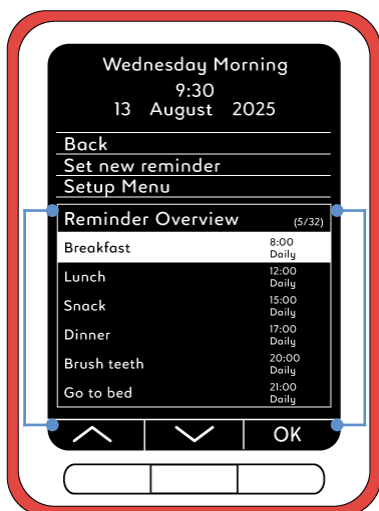

If you want to modify or delete some of the configured reminders, select the **Edit** button.

Troubleshooting

Problem	Potential Cause and Solution
Talking clock feature doesn't sound	The Talking clock feature is set to sound hourly and one reminder applies at the same time, or the Talking clock feature is turned off. Avoid setting reminders at round hours if the talking clock is set to sound hourly, and confirm that the Talking clock feature is turned on.
Settings and time aren't stored when the clock is disconnected from the standard wall socket.	The battery is flat. Replace the CR2032 battery by opening the battery door compartment on the back of the clock.
It's not possible to set any new reminders	The maximum number of allowed reminders was reached. Delete the unused reminders to set more.



Reminder with voice recording is too quiet	Move closer to the microphone (on top of the clock) when recording. Set the volume to high on the Setup Menu.
--	--

Other information

This clock includes a recess for hanging on the wall. Please ensure the fixing method is strong enough to bear the weight of the clock to reduce the risk of any impact hazard.

- Choose the best location for your clock, ensuring it is close and clearly visible.
- It can be placed on a table or mounted on a wall.

When the clock is disconnected from mains electricity, your pre-set information will be saved for up to a year by the integral CR2032 battery. Once this battery runs out you can change it by opening the flap in the rear of the clock. Make sure the writing is on the top side of the battery.
This product comes with a 24 month from purchase warranty to cover manufacturing defects.

Important safety warnings

- Use the clock only with the power adapter supplied.
- Unplug the clock before cleaning. Clean the display screen by gently wiping it with a special screen cloth or a soft damp cloth. Do not use excessive liquid.
- Keep the power adapter cord out of the reach of children.
- Keep the clock, mains cord, and plug away from water.
- Do not attempt to repair the clock as this can be hazardous and void the warranty.
- The clock is for indoor use only.
- Properly dispose of this clock according to your area's recycling regulations. Waste electrical products can harm the environment and should not be thrown away with regular household waste.





Need More Help?

Visit our website to discover videos, guides, and tips to help you get the most out of your BBrain Reminder Day Clock. Or simply get in touch and we'll see how we can help.



@ **Email:**

info@bbrain.eu



Phone :

+31 (0)88 – 0080 130

